

## **CRT ELECTRO**

TURN ON THE RADIO BY PRESSING THE V / M BUTTON THEN RELEASE

THE FREQUENCIES ARE DISPLAYED ON THE SCREEN (144-146 / 430-440)

SELECT THE DESIRED FREQUENCIES WITH THE UP / DOWN BUTTONS (136-174 / 400-470)

TURN OFF THE RADIO